



Pitching High Mountain-4 tent

CAUTION: DO NOT UNHOOK THE INNER TENT FROM THE OUTER RAIN COVER. DOING SO MAY RESULT IN IMPROPER PITCHING OF THIS TENT.

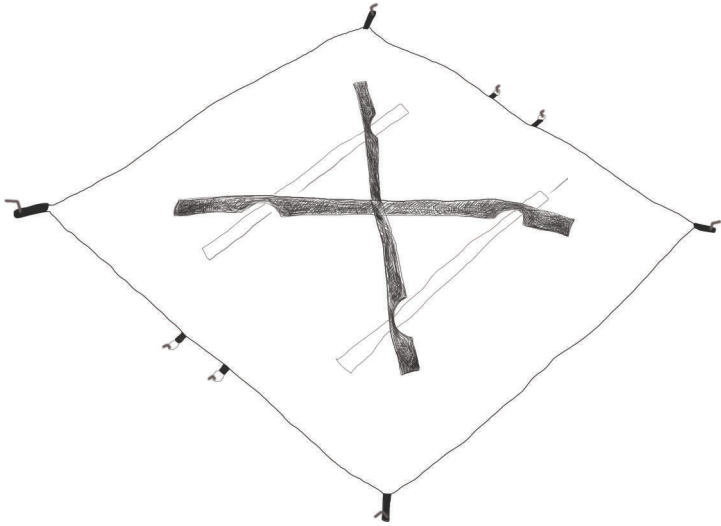

1

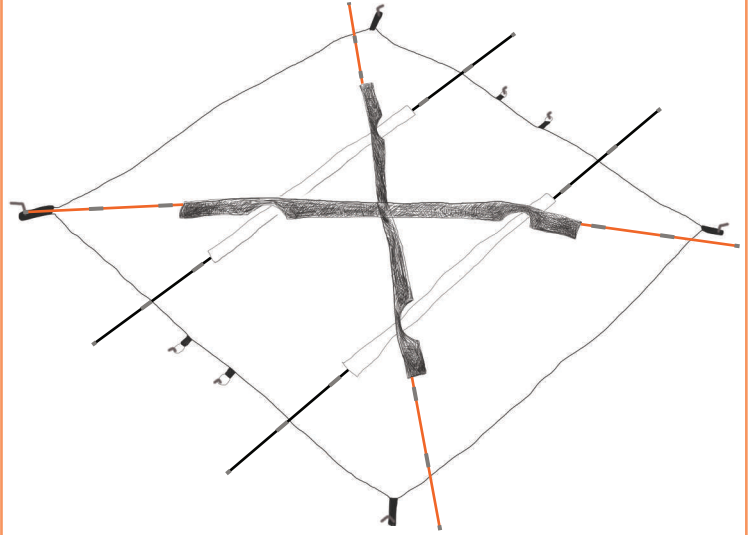

2



3



4